

ASSEMBLY INSTRUCTION 4464


Remove all items from the carton. Verify all pieces before assembly.


PART LIST


KEY,	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	5	Caster	6	1	Seat	11	1	Backrest Bolt + Washers
2	1	Base	7	1	Backrest	12	1	M6 Size Allen Wrench
3	1	Seat Post	8	1	Backrest Post	13	6	Machanism Screw
4	1	Seat Post Cover	9	1	Backrest Screw			
5	1	Mechanism	10	1	M5 Size Allen Wrench			

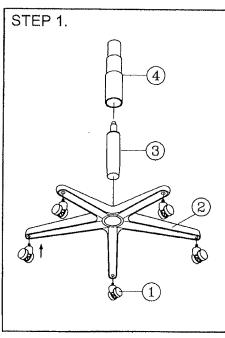


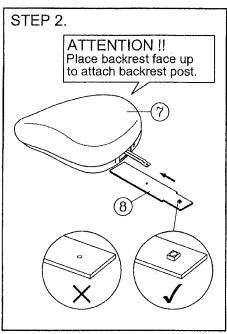

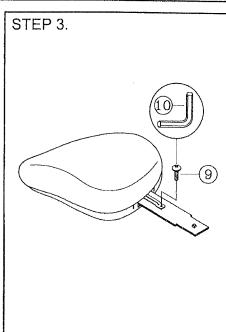

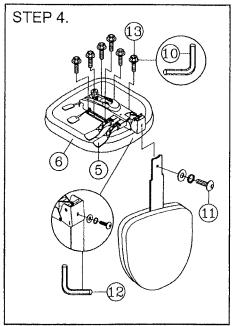

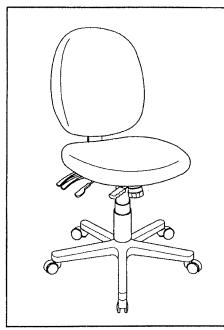

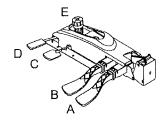

MECHANISM INSTRUCTIONSG:

- (A) Back angle adjustment lever.
- (B) Combination seat / back angle adjustment lever with infinite lock.
- (C) Seat height adjustment lever.
- (D) Forward tilt lever
 - *While seated, lift lever B and then lean back to activate locking mechanism;
 - *Pull lever D backward to allow seat to tilt forward- or -push lever D forward to straighten seat;
 - *To lock in desired position, push lever B downward.
- (E) Tension control knob-Turn colockwise to increase tension and counterclockwise to decrease tension.

PREVENTIVE MAINTENANCE AND WARNING!

ASSEMBLY INSTRUCTIONS.

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME. DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER. DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT. DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES. DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.

- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
 DISPOSE OF PACKAGING PROPERLY, PLASTIC BAG IS NOT A TOY, DO NOT USE PLASTIC BAG AS HEAD COVERING IT MAY CAUSE SUFFOCATION.
 FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
 NOTE:SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE