



 
 
 
 


 
 
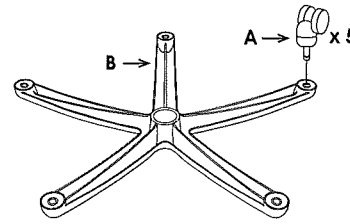 
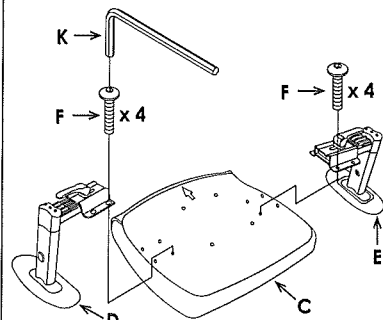 
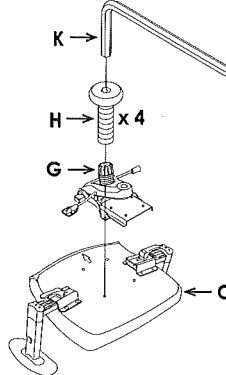 
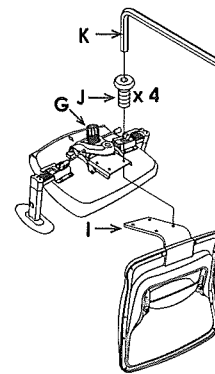 
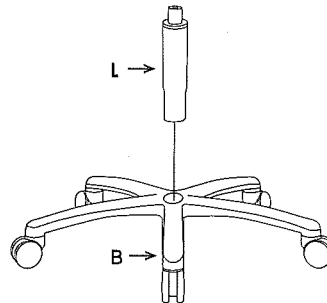 
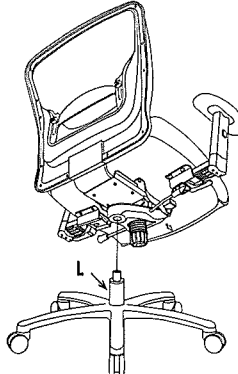 


Before assembly, please remove all parts from the carton, verifying that you have the correct quantities, and read all the instructions.

Part List			
Key	Description	Qty.	Part
A	CASTERS	5	
B	BASE	1	
C	SEAT CUSHION	1	
D	RIGHT ARMREST	1	
E	LEFT ARMREST	1	
F	ARMREST SCREWS D 1/4" x L 7/8"	8	
G	MECHANISM	1	
H	MECHANISM SCREWS D 5/16" x L 1"	4	
I	BACK SUPPORT	1	
J	BACK SUPPORT SCREWS D 5/16" x L 5/8"	4	
K	ALLEN WRENCH	1	
L	GAS LIFT	1	

<p><b>Step 1</b> Turn Base "B" upside down. Insert Casters "A" into Base "B".</p> 	<p><b>Step 2</b> Attach Right Armrest "D" to Seat Cushion "C" with Armrest Screws "F". Repeat for Left Armrest "E". NOTE: Arrows on armrests point to front of seat cushion and fully tighten all screws.</p> 	<p><b>Step 3</b> Attach Mechanism "G" to Seat Cushion "C" with Mechanism Screws "H". NOTE: Fully tighten all screws.</p> 
<p><b>Step 4</b> Attach Back Support "I" to the rear of Mechanism "G" with Back Support Screws "J". NOTE: Fully tighten all screws.</p> 	<p><b>Step 5</b> Insert Gas Lift "L" into hole on Base "B".</p> 	<p><b>Step 6</b> Place seat assembly onto Gas Lift "L". Push firmly on the chair seat to securely attach seat assembly to seat post.</p> 

**⚠ ATTENTION ⚠**

Do not tighten any screws or bolts until the unit is completely assembled.  
 Ensure all bolts and screws are tightened before using. Lubricate all moving parts and check bolts and screws every 6 months.  
 If any parts are missing, broken, damaged or worn, stop use of product until repairs have been made using factory authorized parts.  
 Failure to follow these warnings may result in injury.

**ASSEMBLY INSTRUCTIONS**  
**MODEL: 58551**

Before assembly, please remove all parts from the carton, verifying that you have the correct quantities, and read all the instructions.

**1. ARM HEIGHT ADJUSTMENT**

Press the button on the arm to allow the arm to move up or down freely, then release the button once the desired height is reached.

**2. ARM WIDTH ADJUSTMENT**

To adjust width, push handle down to slide arm to desired position then pull handle up to lock arm into position.

**3. SEAT HEIGHT ADJUSTMENT**

To raise seat height, remove pressure from the seat and lift handle up. To lower seat height, sit on the chair and lift handle up.

**4. TILT TENSION**

Turn knob clockwise to increase tension and counter-clockwise to decrease or ease the tension.

**5. LOCKING KNEE TILT ADJUSTMENT**

Pull handle out for back tilting. Push in to lock back.

