

## ASSEMBLY INSTRUCTIONS


Remove all items from the carton. Verify all pieces before assembly.


## **PARTS LIST**


KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	5	Caster	7	1	Seat	12	2	Armrest
2	1	Base	8	1	Mechanism	13	1	Back Tight Bolt
3	1	Seat Post	9	6	Mechanism Screw	14	1	Back Post Bellow
4	1	Backrest	10	2	Arm Bracket	15	2	Back Post Bellow Screw
5	1	Backrest Post	11	1	Arm Width Adjustment Knob + Washers	16	1	M5 Size Allen Wrench
6	1	Backrest Post Screw						

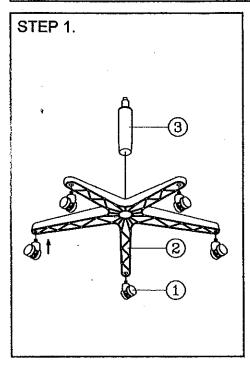


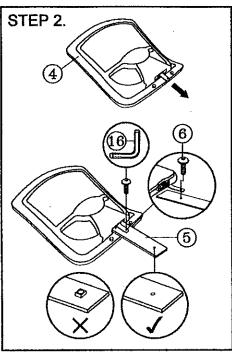

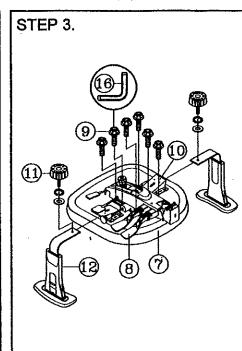

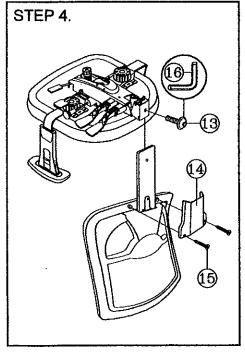

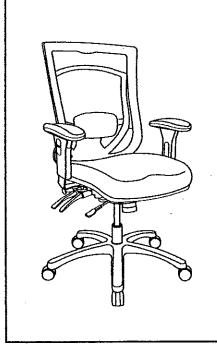

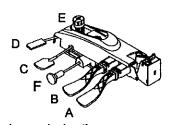

## Mechansm Instructions:

- (A) Back angle adjustment lever.
- (B) Combination seat / back angle adjustment lever with infinite lock.
- (C) Seat height adjustment leve.
- (D) Forward tilt lever-\*Lift lever B to activate the forward tilt. \*Pull lever D backward to allow you to lean to a forward position and push
  - lever B downward to lock position once the desired angle is reached. Tension control knob-Turn colockwise to increase tension and counter-clockwise
- to decrease tension. Sliding seat: Seat depth adjusts for different user leg lengths.

## PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
  DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
  DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
  DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
  DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS
  ARE TIGHTENED.
  EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS
  AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.

  DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING IT MAY CAUSE SUFFOCATION.

  FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

  NOTE:SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.

