 
 
 


ASSEMBLY INSTRUCTION FOR GALLERY DESK W/O TOP




HARDWARE


1  Cam Lock 20 Pcs	2  Klix Cam 20 Pcs	3  Housing Cap (Long) 11 Pcs	4  Housing Cap (Short) 9 Pcs	5  Adjustable Glide 4 Pcs	6  3" L-Bracket With 6 Holes 6 Pcs	7  Screw #6 x 1/4" 36 Pcs	8  M4 x 65 Allen-Key 1 Pc	9  Ø8mm Hole Plug 7 Pcs
--	--	---	---	--	--	--	--	--

COMPONENTS

A  Side Panel x 2	B  Desk Top	C  Back Panel
--	--	--

KLIX CAM INSTRUCTIONS

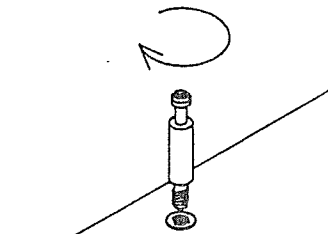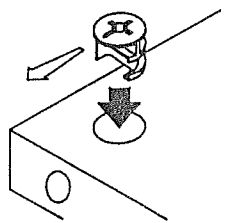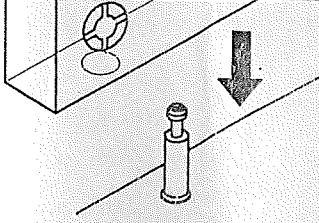
1  Line up Cam Lock, turn clockwise.	2  Insert the cam with the arrow pointing towards the hole in the edge.	3  Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.
---	---	--

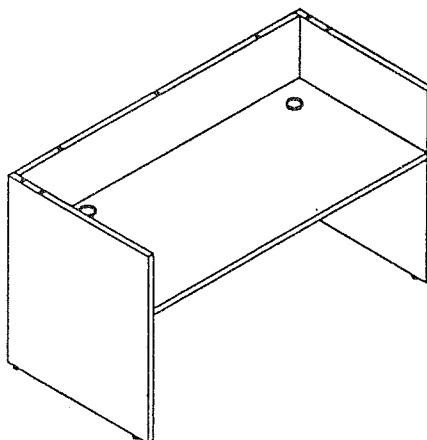

IMPORTANT :


- Place all wooden parts on a clean, smooth surface to prevent the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

 1


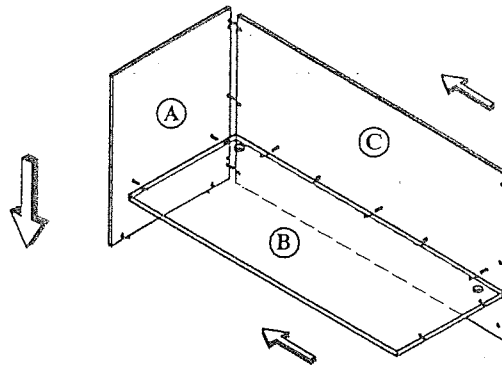


Attach Desk Top(B) and Back Panel(C) to Side Panel(A) by using Cam Lock(1) and Klix Cam(2).

 2

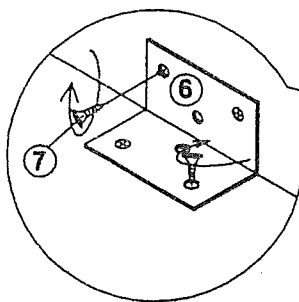


Attach L-Bracket(6) to Side Panel(A) and Desk Top(B) as shown. Tighten Screws(7) securely.

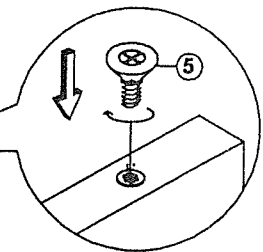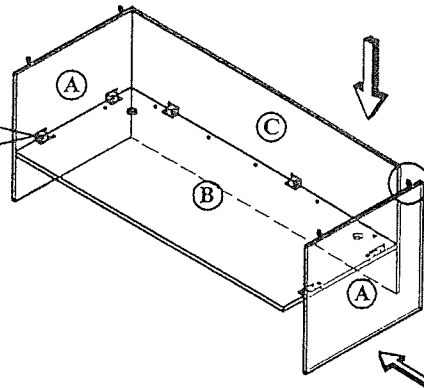


Screw Adjustable Glide(5) into bottom of Side Panel(A).


3

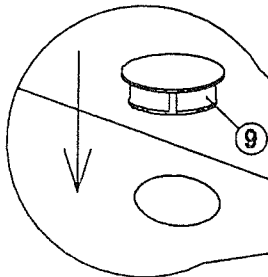

Insert the Hole Plug (9) into Top edge of Side Panel (A) and Back Panel (C) in any holes not being used.

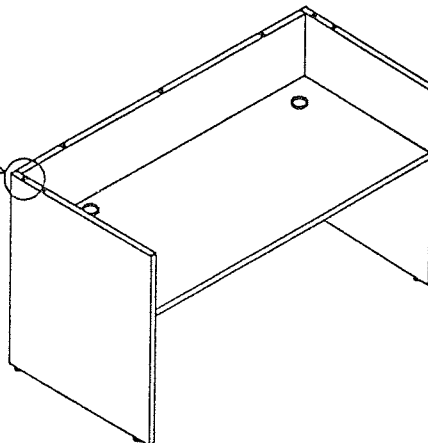

4

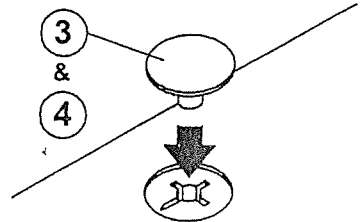


Attach Housing Caps (3,4) to all Klix Cam(2) by pushing neck of cap through center of cam.



**Thank you for purchasing the Performance Gallery Desk.
Please follow these instructions for easy assembly.**

1  Cam Lock 7 Pcs	2  Klix Cam 7 Pcs	3  Housing Cap 7 Pcs	4  Adjustable Glide 4 Pcs	5  6 Hole L-Bracket 3 Pcs	6  Screw #6 x 5/8" 54 Pcs	7  I-Bracket 4 Pcs
---	---	--	---	--	--	--

8  3" L-Bracket With 6 Hole 2 Pcs	9  Ø15mm Hole Plug 3 Pcs	10  Ø8mm Hole Plug 2 Pcs	11  D-Nut Cap M6 3 Pcs	12  M8 x 30 Wood Dowel 4 Pcs	13  M4 x 65 Allen-Key 1 Pc
---	--	--	--	--	--

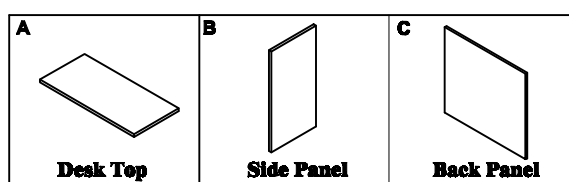


KLIX CAM INSTRUCTIONS

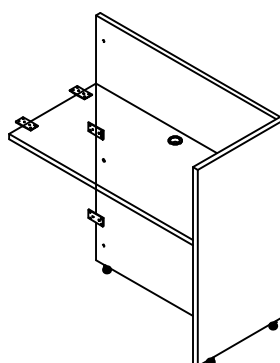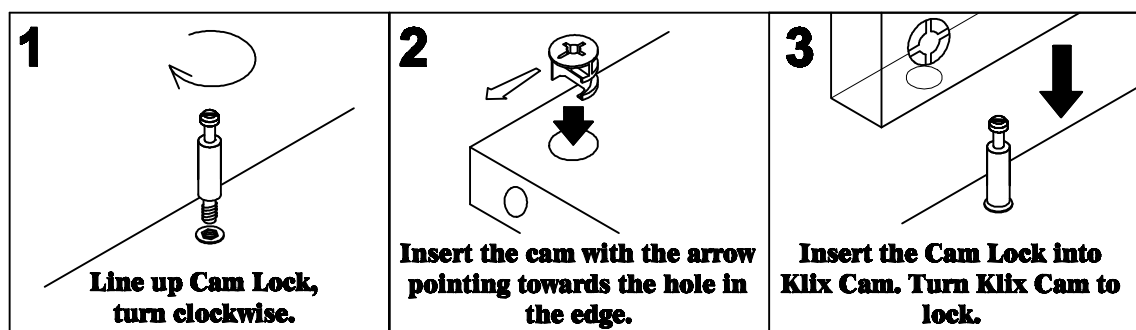

IMPORTANT !!


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

 1

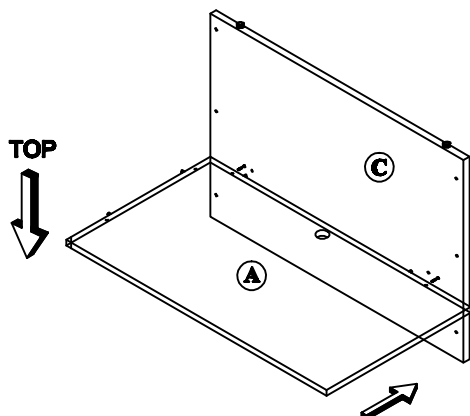


Attach Desk Top(A) and Back Panel(C) to by using Klux Cam(2).

2

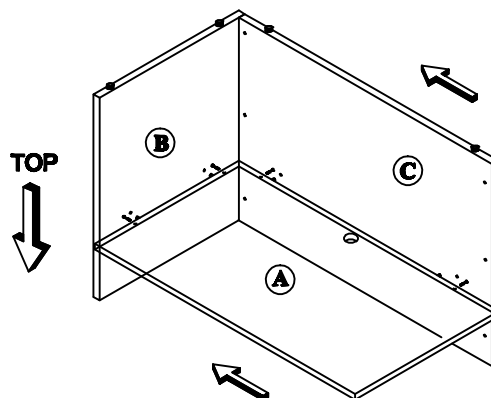


Attach Desk Top(A) and Back Panel(C) to Side Panel(B) by using Cam Lock(1) and Klux Cam(2).

3

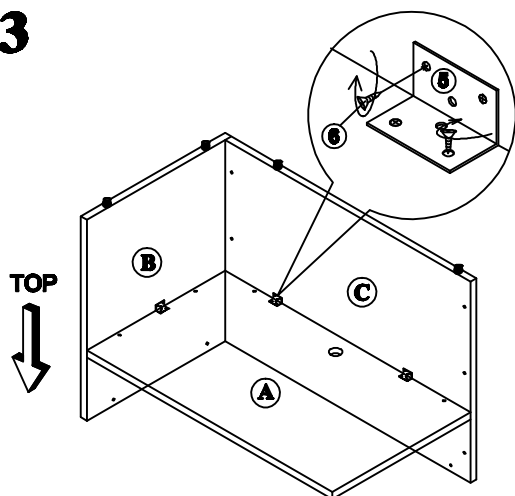


Attach L-Bracket(5) to Back Pane(C), Side Panel(B) and Desk Top(A) as shown. Tighten Screws(6) securely.

4

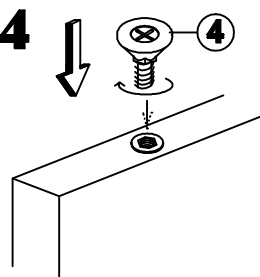


Screw Adjustable Glide(4) into bottom of Back Panel(C) and Side Panel (B).

5

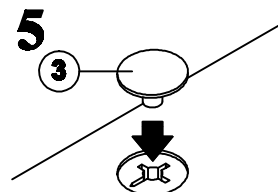

Attach Housing Cap (3) to all Klux Cam(2) by pushing neck through center of cam.

6

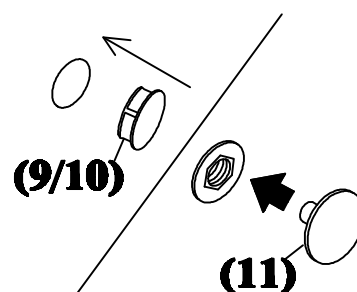

Insert the Hole Plug (9/10) and D-nut Cap (11) to all drill hole of the other edge of Side Panel (B) and Back Panel (C) which the hole are not in use.

Additional Hardware.
Please note that Performance Office Furnishings has enclosed additional hardware to allow you to attach this gallery return to other pieces.