 





 
 
 
 
 
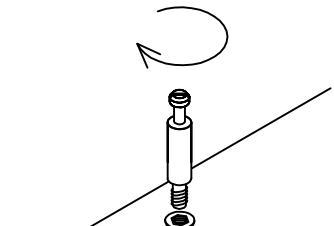 
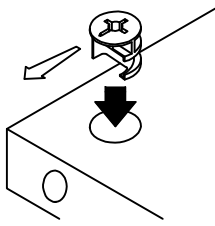 
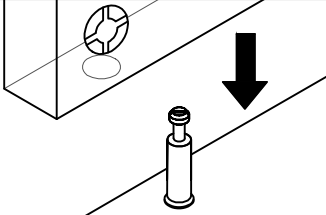 



Thank you for purchasing the Performance MALL OPEN HUTCH
Please follow these instructions for easy assembly.

1  Cam Lock 20 Pcs	2  Klix Cam 20 Pcs	3  Housing Cap (Long) 18 Pcs	4  Housing Cap (Short) 2 Pcs	5  Ø5mm Hole Plug 20 Pcs	6  M4 x 65 Allen-Key 1 Pc
--	--	---	---	---	--

A  Top Panel	B  Side Panel x 2	C  Center Vertical x 2	D  Bottom Panel	E  Back Panel
---	--	---	---	--

KLIX CAM INSTRUCTIONS


1  Line up Cam Lock, turn clockwise.	2  Insert the cam with the arrow pointing towards the hole in the edge.	3  Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.
---	---	---

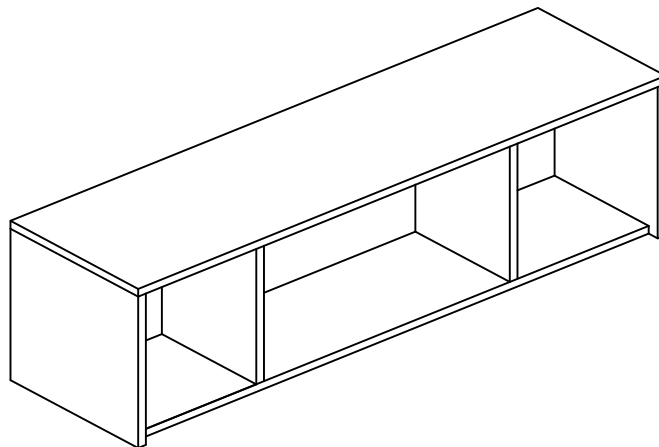 

IMPORTANT !!


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

 1

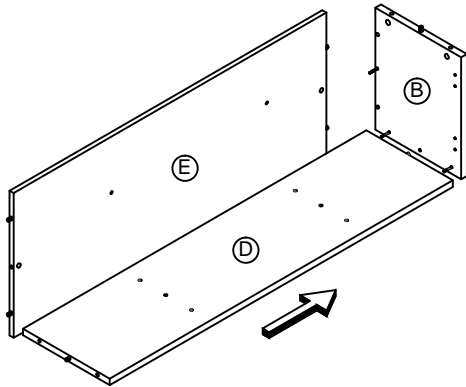

Attach the Bottom Panel (D) and Back Panel (E) to Side Panel (B) by using Cam Lock (1) and Klix Cam (2).

 
2

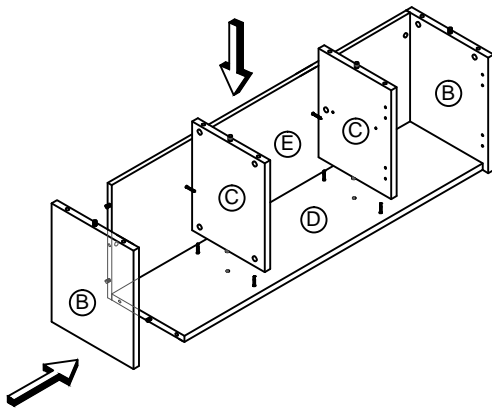

Attach the Center Vertical (C) to Bottom Panel (D) and Back Panel (E) by using Cam Lock (1) and Klix Cam (2).


Attach another Side Panel (B) to Bottom Panel (D) and Back Panel (E) by using Cam Lock (1) and Klix Cam (2).

 3

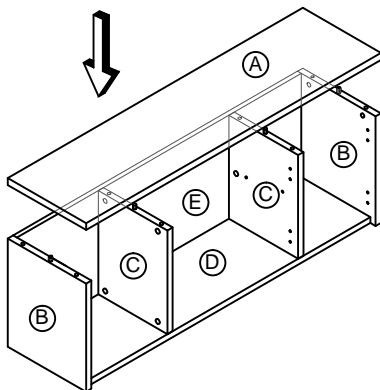

Attach the Top Panel (A) to Side Panel (B) and Center Vertical Panel (C) by using Cam Lock (1) and Klix Cam (2).

 4

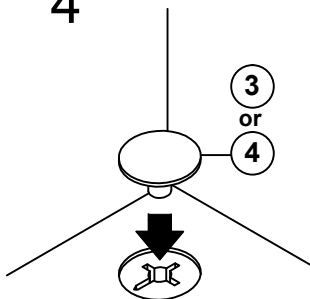

Attach Housing Cap (3 or 4) to all Klix Cam (2) by pushing neck thought center of cam.

5



Insert the Hole Plug (5) to all drill hole of the Side Panel (B) and Center Vertical Panel (C).