 
 
 


PL 194GGA/PL 179-B1GG RETURN


Please follow these instructions for easy assembly.









KLIX CAM INSTRUCTIONS

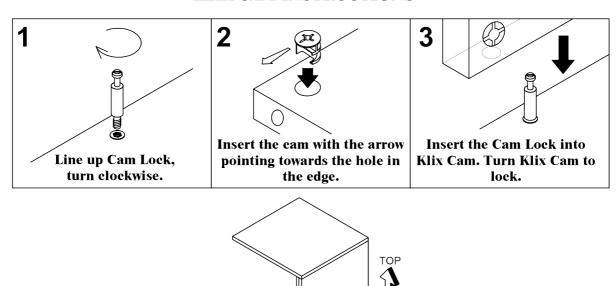

IMPORTANT!


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.
- When using these models in a borders setup, first you need to layout all posts and panels before attaching to work surfaces. DO NOT use template.

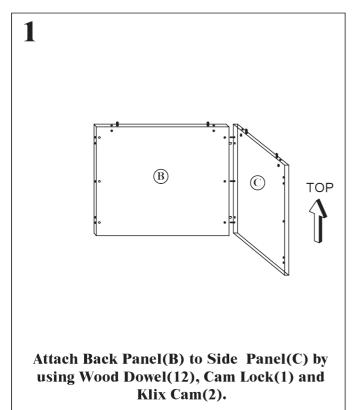


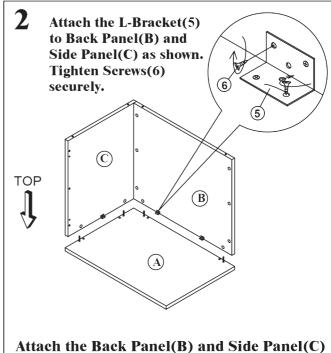


to Top Panel(A) by using Cam Lock(1) and

Klix Cam(2).

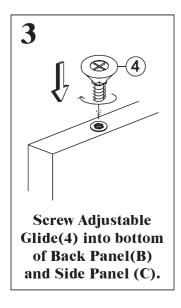

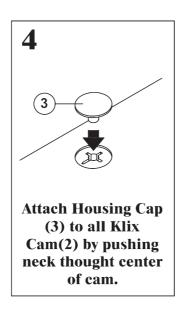

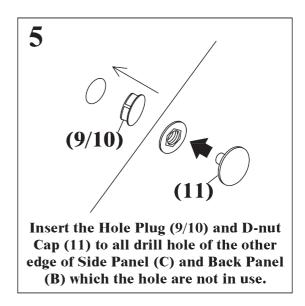

Additional Hardware.

Please note that Performance Office Furnishings has enclosed additional hardware to allow you to attach this return to other pieces.