 





 
 
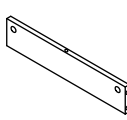
 
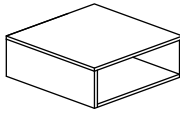





## HARDWARE


<p><b>1</b></p>  <p>CAM LOCK 4 Pcs</p>	<p><b>2</b></p>  <p>KLIX CAM 4 Pcs</p>	<p><b>3</b></p>  <p>HOUSING CAP (LONG) 4 Pcs</p>	<p><b>4</b></p>  <p>SCREW M6 x 40MM 4 Pcs</p>	<p><b>5</b></p>  <p>WASHER 4 Pcs</p>	<p><b>6</b></p>  <p>M4 x 65 ALLEN-KEY 1 Pc</p>	<p><b>7</b></p>  <p>ADJUSTABLE GLIDE 6 Pcs</p>
---	---	---	--	--	---	---

## COMPONENTS

<p><b>A</b></p>  <p>FRONT/BACK PANEL</p>	<p><b>B</b></p>  <p>SIDE PANEL x 2</p>	<p><b>C</b></p>  <p>BOTTOM RAIL x 2</p>	<p><b>D</b></p>  <p>COMPOSE END TABLE CUBE (SOLD SEPERATELY)</p>
---	---	---	---

## KLIX CAM INSTRUCTIONS
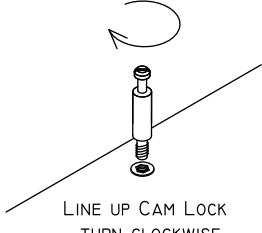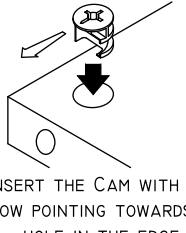
<p><b>1</b></p>  <p>LINE UP CAM LOCK TURN CLOCKWISE.</p>	<p><b>2</b></p>  <p>INSERT THE CAM WITH THE ARROW POINTING TOWARDS THE HOLE IN THE EDGE.</p>	<p><b>3</b></p>  <p>INSERT THE CAM LOCK INTO KLIX CAM. TURN KLIX CAM TO LOCK.</p>
--	--	---

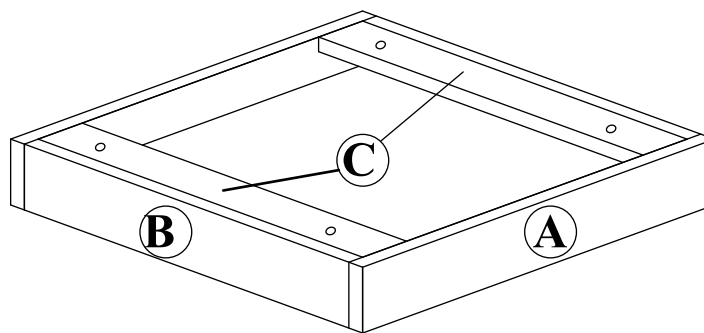

### IMPORTANT NOTE :

- Place all wooden parts on a clean, smooth surface to prevent the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

