 
 




Thank you for purchasing the Performance Desk Shell. Please follow these instructions for easy assembly.






KLIX CAM INSTRUCTIONS

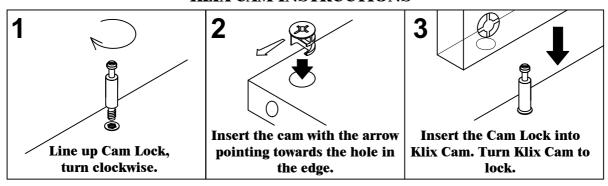

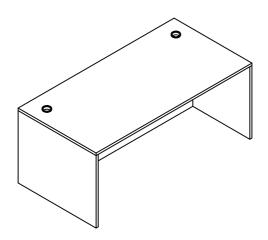



IMPORTANT:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten screws/bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

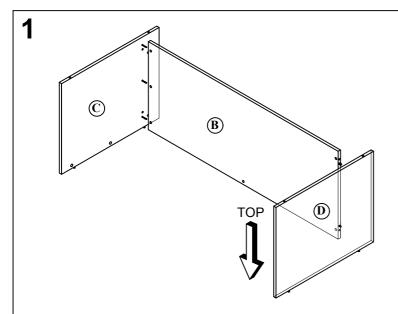

Turn Top Panel (A) upside down and insert Cam Lock pins (1) into top panel and into side panels (C,D). Insert Klix Cams (2) in Side Panels (C,D) and back panel (B). Attach Back Panel (B) to side panels (C,D) and Top Panel (A). Turn Klix Cam to tighten.

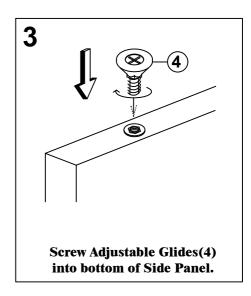

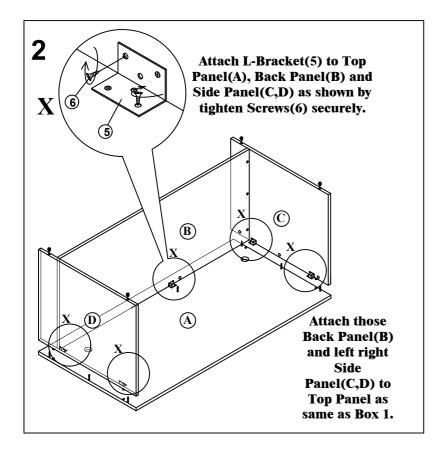

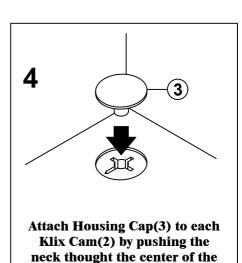

Klix Cam.