

# Lock Buying Guide



PL Laminate Standard Key Set



PL Laminate Master



PL Laminate
Core Removal



Metal Storage Standard Key Set



Metal Storage Master Key



Metal Storage Core Change Key

### **PL Cabinets**

Cabinet locks are used with laminate DOORS.

#### **PLMKEY**

PL MASTER KEY
PLMKEY is the laminate master key, used to unlock any cabinet.

Also used for pedestals



### **PLLOCKCORE**

PL LOCK CORE KIT

PLLOCKCORE replaces your existing lock core. Includes new core, core removal key and 2 new keys. To remove core, cabinet must be <u>unlocked</u>. Also used for pedestals



## PLLOCKS CABINET PLLOCKS-SILV CABINET

PL CABINET LOCK ASSEMBLY

Complete lock assembly. Replaces your
existing cabinet lock assembly.





Silver for use with WHITE laminate products.

### **PL Pedestals**

Pedestal locks are used with laminate DRAWERS.

#### **PLMKEY**

PLMASTER KEY
PLMKEY is the laminate master key, used to unlock any pedestal.

Also used for cabinets



### **PLLOCKCORE**

PL LOCK CORE KIT

PLLOCKCORE replaces your existing lock core. Includes new core, core removal key, and 2 new keys. To remove core, pedestal must be <u>locked</u>. Also used for cabinets



## PLLOCKS PEDESTAL PLLOCKS-SILV PEDESTAL

PL PEDESTAL LOCK ASSEMBLY

Complete lock assembly. Replaces your existing pedestal lock assembly.







Silver for use with WHITE laminate products.

### **Metal File Drawers**

8000 keys and cores used with all metal files.

#### 8000MASTERKEY

METAL STORAGE MASTER KEY

8000MASTERKEY is the metal file master key,
used to unlock any metal file.



### **8000CORREVKEY**

Core Change Key

8000CORREVKEY is the metal file change key, used to remove the lock core on metal files.



### 8000LOCKCOREKIT

LOCK CORE KIT

8000LOCKCOREKIT replaces existing lock core. Includes new core and 2 new keys. To remove core, file must be <u>locked</u>.

Requires core change key, 8000CORREVKEY









### Lock Buying Guide

### How to order and Frequently asked Questions

### **Locking Products**

All lockable products RMF-Group sells come with locks and 2 keys. Different products will not automatically be keyed alike, but if an item has multiple locks the locks on that item will be keyed alike- for example the PL207 wardrobe ships with a cabinet and pedestal lock, keyed alike.

### **Laminate Locks**

There are two types of laminate locks: locks for a pedestal (drawers) and locks for cabinet (doors).





PLLOCKS CABINET

### **Metal Storage Locks**

All metal files use the same style lock.

To remove lock core you must order 8000CORREVKEY







### **How to Order**

Are you ordering more than 1 item?

**NO** - your product will arrive with a lock and set of keys, no need to order additional locks.

**YES** - do you need your items to be keyed alike?

**NO** - your products will arrive keyed separately, no need to order additional locks.

YES - you will need to order additional locks in order to key alike.

### **How to Key Alike**

PL Laminate: Determine how many lock cores you need. You will be ordering lock core kits.

PO should read: PLLOCKCORE (x qty needed), "KEY ALIKE"

Metal Storage: Determine how many lock cores you need. 8000CORREVKEY required to remove core and key alike.

PO should read: 8000CORREVKEY qty 1, 8000LOCKCOREKIT (x qty needed), "KEY ALIKE"

### **Frequently Asked Questions**

### Can I order a replacement key for lock core number X?

RMF-Group does not sell individual replacement keys. The best solution is to purchase a new lock core or complete lock.

### I have lost my key! I am locked out, help!

The best option is to order a Master Key and replacement lock core. This will allow you to open the lock out and replace with a new secure lock core and set.

### My pedestal is locked and I must urgently open, emergency help!

If you must open your drawer and do not have a master key you can drill out the core. You can then replace the damaged lock with a complete lock kit assembly or lock core.

### I have a lock core change key but can not unlock my drawer?

8000CORREVKEY and PL core removal key will not unlock your item. To open you will need the original key or a master key.

PL cabinet lock cores can be removed when the door is locked, but this will not allow you to open the door, you will still need a master key.