



INITIALIZATION / RESET

Push down the toggle and hold for around 3 seconds, the desk moves down; keep pressing the toggle until the desk reaches the lowest height then bounces back about 5mm, the control box beeps. The initialization / reset is complete.

Height Adjustment

Keep pulling up/pushing down the toggle, the desk starts moving up / down, when the desk reaches the desired height, release the toggle, the desk stops moving.

ERROR ALARM

- 1、 Constant running of the system for 4 minutes, toggle up/down, control box beeps twice. Stop operating the desk for 20 minutes.
- 2、 Restore power after accident power failure, toggle up/down, beep sound once. Reset the system to solve the problem.
- 3、 Two columns height difference protection. Toggle up/down, beep sound once. Reset the system to solve the problem.