



## PL 40, PL 41, PL 44 LD For PL 140 OH, PL 141 OH, PL 144 OH (2pcs per set)

Thank you for purchasing the Office Source Laminate Door Set. Please follow these instructions for easy assembly.

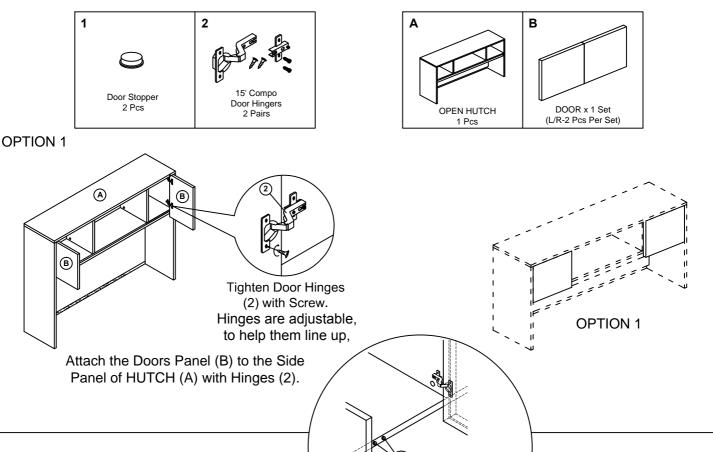

## OPTION 2

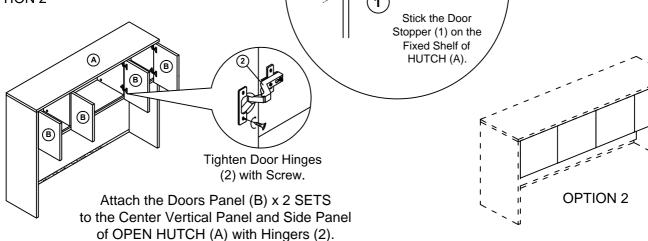

## **IMPORTANT!!**

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.