



3702 Seat Cover Installation

Follow these simple step by step instructions to change your 3702 seat cover.

- Remove the existing black seat cover shipped with your 3702 chair seat.
- Apply the new seat cover – **do not zip**.
- With the **unzipped** seat cover face down, slide one edge of the mechanism into the corner of the seat cover. **Do not Velcro anything together yet.**



- Press the mechanism firmly into the first corner of the seat cover. Keep pressing until you are able to slide the other corner over the mechanism. This will be very tight.



- Once both corners are in, adjust the seat to be square with the frame of the chair.


- Velcro the front of the seat cover to the mechanism.



- Lift up the back end of the seat and zip the seat cover completely.



- Velcro the tabs on either side of the frame.

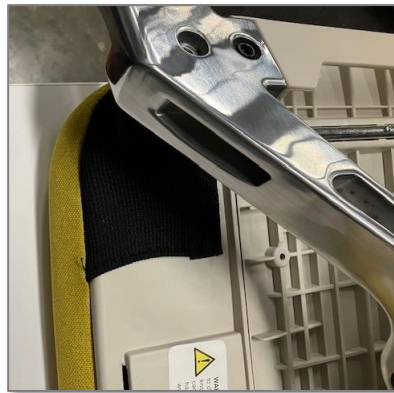

Once the seat cover is securely in place, install the seat to the chair frame.

